

Oil Change Canister

Description

- Capacity 10 l
- Separate venting screw
- Suitable for passenger cars and motorcycles

Dimensions: 57 x 32 x 13 cm



Areas of application

For environmentally friendly do-it-yourself oil change without lifting platform.

Comment

Before pouring in the used oil, remove both thumb screws from the oil change canister. Otherwise the tray may overflow.

Application

Before the oil change, remove both thumb screws on the oil change canister and position it with the depression under the oil drain plug. Close it again for transport and storage.

Available pack sizes

1 pcs Carton 7055
D

Our information is based on thorough research and may be considered reliable, although not legally binding.